



CR Pulsation Enhancers

The CRs are designed to adjust the C Phase without affecting the A Phase of the pulsator waveform. Upon installation, the A Phase will increase slightly and will remain constant while adjustments are made to the C Phase. The units are to be installed in the twin pulsation tube approximately 2" from the pulsator. The units are not to be installed as to support the weight of the pulsation tubing or in a position that could have any twisting forces.


CR 120
 Item #10505




CR 160
 Item #10506



Check below to see which CR is needed for your type of pulsator!

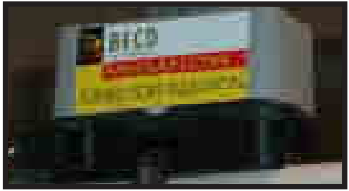

Install CR 160 -
 Setting #2

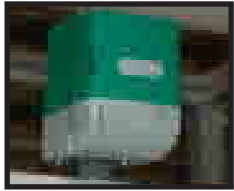

Install CR 160 -
 Setting #2



Install CR 160 -
 Setting #2



No CR needed on older coils -
 Install CR 120 on new high flow coils



No CR needed
 majority of time

Note: if pulsators (any style) are in a subway or basement, then order and install CR 120s Item #10505